

## ADATTATORE INTERNET WIRELESS 300N USB 2,0

Guida rapida all'installazione

DN-70542 • DN-70543

## Installazione del driver

Vi preghiamo di seguire le seguenti istruzioni per installare il vostro nuovo adattatore Wi-Fi USB:

- Inserire l'adattatore di rete wireless USB in una porta USB 2.0 disponibile del vostro computer. Si noti che il lato del connettore USB è direzionale, quindi ruotate l'adattatore USB quando lo stesso non può essere inserito in una porta USB.
- Il seguente messaggio apparirà sul vostro computer, cliccare su '<u>Cancel /</u> <u>Close</u>'.



## In Windows XP

## In Windows Vista e Windows 7

Driver Software Installation		<b>×</b>
Installing device driver so	oftware	
802.11 n WLAN	Waiting for user input	
		01007
		Close

 Inserire il CD driver nel CD-ROM. Potrete vedere lo schermo di avvio automatico sotto riportato. In caso contrario potete fare doppio clic su <u>autorun.exe</u>' sul CD.



Cliccare 'Install Driver' per avviare la procedura di installazione.

**4.** Verrà quindi mostrato l'applicativo di installazione. Cliccare su 'Next' per continuare.



 Una volta che l'installazione è completata il computer chiederà di esser riavviato. Potete cliccare su '<u>Finish</u>' e riavviare il computer per completare l'installazione del driver.



**6.** Inserire l'adattatore di rete wireless USB (DN-70542/DN-70543) in una porta USB 2.0 del vostro computer, il sistema troverà il nuovo hardware ed installerà i driver automaticamente.



 Dopo aver finito l'installazione, cliccate sugli strumenti dell'adattatore dalla vostra barra di avvio o dalla cartella programmi. Cliccare su "Reti Disponibili", selezionare il punto di accesso wireless a cui volete connettervi e premete il pulsante "Aggiungi al Profilo".

🕷 REALTEK 11n USB W	reless LAN Utility				
Refresh(R) Mode(M) Abou	t(A)				
🖃 💡 MyComputer	General Profile Available Network Status Statistics Wi-Fi Protect Setup				
Realtek RTL818	Available Network(s)				
	SSID Channel Encryption Network Authentication	Signal 1			
	1 AES WPA Pre-Shared Key	88% Ir			
	🔊 NETCORE 1 None Unknown	42% Ir			
	🗱 HLY3F 6 TKIP WPA Pre-Shared Key	26% Ir			
	L <sup>39</sup> QA300M 6 None Unknown	58% Ir			
	1 <sup>29</sup> WR2880 6 None Unknown	8% Ir			
		62% Ir			
		92% Ir			
		<u> </u>			
	Refresh Add to Profile	]			
	Note				
	Double click on item to join/create profile.				
✓ Show Tray Icon ■ Radio Off	<ul> <li>Disable Adapter</li> <li>Windows Zero Config</li> </ul>	Close			

**8.** Completate le informazioni di sicurezza necessarie e quindi premete su "OK" per connettervi alla rete wireless.

Profile Name: HLY96C	802.1x configure
letwork Name(SSID): HLY96C	
	EAP TYPE :
	GTC
	Tunnel : Privision Mode :
This is a computer-to-computer(ad hoc) network; wireless access points are not used.	~
Channel: 1 (2412MHz)	
	Username :
Wireless network security	
This network requires a key for the following:	Identity :
Network Authentication: WPA-PSK	
Data encryption: AES	Domain :
	Password :
Kenninghan Kadumangki	Cortificate :
Network key:	
********	
Confirm matural laws	PAC : LAUTO SEIECT PAC
ASCI PASSPHRASE	Password : Certificate : PAC : Auto Select PAC

**9.** Once connection is successful, it will show the status screen.

REALTEK 11n USB Wireless LAN Utility		
Refresh(R) Mode(M) Abou	ıt(A)	
🖃 🪽 MyComputer	General Profile Available Network Status Statistics Wi-Fi Protect Setup	
Realtek R IL818		
	Status: Associated	
	Speed: Tx:150 Mbps Rx:150 Mbps	
	Type: Infrastructure	
	Encryption: AES	
	SSID: HLY96C	
	Signal Strength:	
	Link Quality:	
	99%	
	Network Address:	
	MAC Address: 00:E0:4C:71:00:01	
	IP Address: 192.168.1.139	
	Subnet Mask: 255.255.255.0	
	Gateway:	
	PoNow ID	_
<		
🗹 Show Tray Icon	Disable Adapter	Close
🔲 Radio Off	Windows Zero Config	