

SERIAL/PARALLEL I/O PCI EXPRESS ADD-ON CARD



User Manual DS-30040-2

Features and Benefits

Features Compliant with PCI Express Base

Specification 1.0a

Supports 2 x UART serial port

Built-in 16C450/550 compatible UART

On chip 256 byte FIFOs in transmit and

receive path of each serial port

Serial data transfer rate up to 230400bps

Supports Standard Parallel Port (SPP), Enhanced Parallel (EPP) & Enhanced Capability Port (ECP) Parallel data transfer

rate up to 1.5Mbps

Bus PCI-Express x1

Connectors 2 x DB9 male serial connectors

1 x DB25 female parallel connector

System Requirements

- Windows[®] 2000 / 2003 / XP/ 32/64 bit, Vista 32/64 bit, Win 7 32bit/64bit
- One available PCI Express slot


Package Contents

- 1 x PCle 2S1P Card
- 1 x Serial port bracket

1 x Driver CD

1 x User's Manual

Hardware description

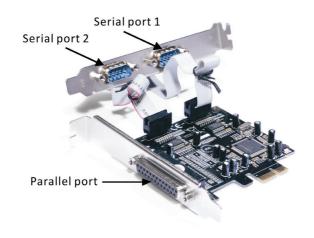

Hardware Installation

- 1. Turn Off the power to your computer.
- 2. Unplug the power cord and remove your computer's cover.
- 3. Remove the slot bracket from an available PCIe slot.
- To install the card, carefully align the card's bus connector with the selected PCle slot on the motherboard. Push the board down firmly.
- 5. Replace the slot bracket's holding screw to secure the card.
- 6. Replace the computer cover and reconnect the power cord.

Driver Installation For Windows® 2000/XP/Server 2003

- 1. Don't insert the PCIe card into PCIe slot.
- 2. At the Windows desktop click Start, then Run.
- Locate:\MCS9901\XP32bit\Setup.exe, then click OK.
- 4. Press "Install" button to install the drivers.
- 5. Click "Exit" button to complete the driver installation.
- Shutdown the PC.
- Place the PCIe card into PCIe slot and then power on the system.
- 8. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® XP-x64/Server 2003-x64

- 1. Don't insert the PCIe card into PCIe slot.
- Locate: \MCS9901\XP64bit\Setup.exe, then click OK.
- Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- Shutdown the PC.
- Place the PCIe card into the PCIe slot then power on the system.
- Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® Vista

- 1. Don't insert the PCle card into PCle slot.
- Locate: \MCS9901\Vista32bit\Setup.exe, then click OK.
- 3. Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- 5. Shutdown the PC.
- Place the PCIe card into PCIe slot and then power on the system.
- Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® Vista-x64

- Don't insert the PCle card into PCle slot.
- 2. Locate: \MCS9901\Vista64bit\Setup.exe, then click OK.
- 3. Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- 5. Shutdown the PC.
- Place the PCIe card into PCIe slot and then power on the system.
- Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® 7, 32bit

- Don't insert the PCle card into PCle slot.
- Locate: \MCS9901\Win 7 32bit\Setup.exe, then click OK.
- Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- Shutdown the PC.
- Place the PCIe card into PCIe slot and then power on the system.
- 7. Once the system gets booted the Windows will automatically start installing the device driver software.

For Windows® 7, 64bit

- Don't insert the PCle card into PCle slot.
- 2. Locate: \MCS9901\Win 7 64bit\Setup.exe, then click OK.
- 3. Press "Install" button to install the drivers.
- 4. Click "Exit" button to complete the driver installation.
- Shutdown the PC.
- Place the PCIe card into PCIe slot and then power on the system.
- Once the system gets booted the Windows will automatically start installing the device driver software.

To Verify Windows® Driver Installation

Click on the **Device Manager** tab in System Properties, which you access from the Windows Control Panel. You should see two **High-Speed PCle Serial Port** ... and one **PCle ECP Parallel Port** ... installed under **Ports** (**COM & LPT**) item.